

Hi Lo Mono 500/600- Trolley 8420 and 8421

-Screens upto 86" -Lift apacity 13 Okg

WARNING! THIS IS NOT A TOY!

WARNING! CHILDREN SHOULD NOT OPERATE LIFT OR HAVE ACCESS TO THE **OPTIONAL REMOTE CONTROL!**

WARNING! THE LIFT MUST BE IN THE LOWEST POSITION WHEN MOVING IT AROUND!

Safety instructions

Use the following safety guidelines to help protect your liftfom pootennti dam e and to ensure your own personal safety.

- Read all the installati in instruccti is before tesesg or install ing your lift.
- Read and follow all safety instructions.
- Keep the opti nal remote control out of reach of children.
- To prevent bodily injury, keep hands and clothing away from the lift whie the lift is in operatio .
- Before installing the lift or orking with its connectio s, unplug the lift om the mains power supply socket
- Do not place the lift in paces subject o extreme temperatures for example near a radiator, or heating vent.
- The Electric lift m st only be mounted in a dry area and it must ensured before use that the liftis s fe or protected from liquid contact or spillage.
- Unplug the liftIMMEDI TELLY in theollowing c conditions:
 - -When the power cord or plug is damaged or frayed.
 - -If liquid has spilled into the lif.
 - -If the lifthas been xposed to rain or water.
 - -If the lifexhibits a dissstinccha e in per formance, indicating a need for servicing.
- MANUFACTURERS who build this Lift to other products or use it with other products, MUST make sure to prevent bodily injury. The MANUFACTURER is responsible to give the end user proper warnings and instructons for use.
- When adding a TV or any other equipment the party adding this TV or equipment is responsible for stability and security.
- The lift sould only be used on a flat floor area














1. Secure the casters in place as shown using M10*30mm bolts and a nylock nut.

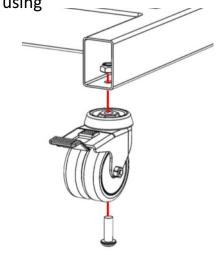

2. Lower the cover onto

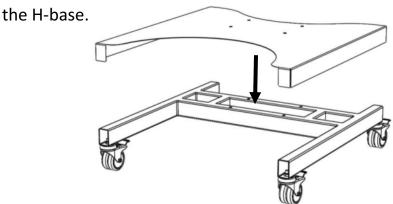

3. Bolt the lift olumn and head box to the base using four M10*20 bolts and nyloc nuts. Cover the nuts with the caps.

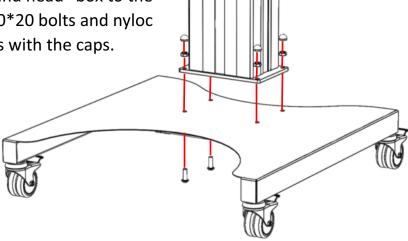











4. Secure the mount to the headbox using four M8 bolts.

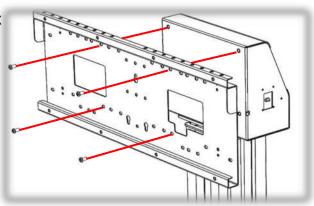

5. Atach the brackets to the back of the screen, make sure the brackets are as

central as possible.

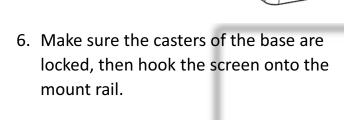

7. Secure the screen in place using the clips and two M6*50mm bolts.







